



Model No. SPC-01

Contents:

Warranty Policy

Use Precautions

Device Maintain

Troubleshooting

Specifications

Safety precautions

Accessories Confirmation

Unit Parts and Functions

Charger using in Staff Pager

Introduction

Thank you for purchasing ARCT SPC-01 Charger. This operating instruction is

Introduction:

for SPC-01Charger, Before connecting and operating pager, please read following instructions completely, and save this manual for future use. Here by, we declare that this SPC-01 Charger is in compliance with Part 15 of the FCC Rules

and essential requirements and other relevant provisions of directive 1999/5/EC. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warranty Policy:

The warranty period is 18 months of service time from date of invoice. (For further warranty period, please contact your distributor or dealer)

P3

Р3

Р3

P5

P6

P7

P7

P8

P8

The following damages are not covered by the warranty, including dropping, water contact or any other wrong use, other than the purpose designed for.

Safety precautions: To prevent severe injury and loss of life/property, read this section carefully before using the unit to ensure proper and safe operation of your unit.

The section explains the graphic symbols used in this manual.

WARNING Denotes a potential hazard that could result in serious injury or death

Charger: SPC-01 / WARNING

If a malfunction occurs, immediately unplug the power plug, and stop using

the devise. Continuing to use the device while a malfunction, such as smoke or unusual smell emitted.

occurs may cause fire or electric shock. Contact qualified service personnel for maintenance.

Do no damage the power cable, or the power plug.

(Scratching, modifying, placing near hot tools, bending excessively, twisting, stretching, weighing down or bundling) Using a damaged AC adaptor, power cable or plug may cause electric shock, shock, short circuit

Use only the specified AC adaptor with this product.

Using unspecified AC adaptor, may cause smoke or fire.

■ Do not touch this unit. AC adaptor and power cable during lighting storms. There is the risk of electric shock.

Clean dust of the power plug regularly.

If dust accumulates on the plug, insulation failure caused by humidity occurs and exist a risk of fire.

Inserting the plug incompletely may cause electric shock, overheating or fire. Do not use a damaged plug or loosened AC outlet.

Do not pull or insert the power plug with wet hands.

■ Insert the power plug completely

Failure using may cause electric shock. ■ Do not exceed the ratings of AC outlet and wirings, and connect the AC

adaptor only within 110~240V AC. Exceeding the rating may result in overheating and fire.

Do not expose this product in water or moisture. Failure using may cause fire or electric shock.

Do no attempt to disassemble or modify this product. Failure using may cause fire or electric shock.

AC adaptor:

Use Precaution:

When the charger is moved from a cold place to a warm place, condensation may be formed. If it is formed, do not use the charger and wait until condensation disappears.

Do not drop this product, give a strong impact, or put a heavy object upon the device. ■ When the AC adaptor is defaced, use dry cloth to dry it.(Do not use any volatile cleaner such

as a thinner etc.) Keep away the device from direct sunlight and avoid preserving the device to overheat or low.

■ Do not use the devise in outdoor

Do not use other power cable which is not provided from ARCT. Use specific charger

Read the following instructions to use this product correctly.

Wipe up water from the staff pager before mounting it on.

Keep the device away from direct sunlight or a place near heat sources

Keep the device away from radical changes in temperature or to high humidity.

Operation environment and service place

isessentially.

Accessories Confirmation:

Before using, examine the following accessories. If there missing any items, please contact your dealer.

Main unit



AC adaptor 5V/2A




 
Operating instructions(this document)



Names of parts and their functions

Main unit

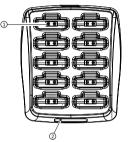



		<u>-</u>
No	Name	Details
1	Power supply terminal	Used for supplying power to the staff pager in order to charge it.
2	PWR Indicator	Light red: charging cradle has power
3	DC jack terminal	Connect the provided AC adaptor to this terminal.

Connection

Connect AC adaptor to this terminal



Place the staff pager on the charger.

■ Properly place the staff pager on the charger.



Note:

- 1. Do not place the staff pager on the charger when it is wet.
- When placing the staff pager on the charger, keep away from wet environment.
- 2. Whencharging the staff pager, the ambient temperature should be between 5°C ~ 35°C. 3. Stop charging when the device is overheated.

How to care

Make sure that the AC adaptor is not connected when starting maintenance.

- Main unit(excluding the power supply terminal)
- When the main unit is defaced, clean it with a dry soft cloth. When the dirt is not able to remove, wipe gently with a well squeezed wet cloth first and then wipe with a dry soft cloth. - Do not use the following material under below when clean the main unit: thinner, benzene, wax, petroleum, soap, polishing powder, hot water, chemical cleaning cloth.
- Power supply terminal
- When the power supply terminal becomes dusty or stained with grease, etc., the staff pager may not able to charge. When it becomes dirty, using a dry soft cloth according to the dirtiness. (Monthly Cleaning is recommended)
- Do not bend the terminal.

Troubleshooting

Symptom	Check items and solutions		
Staff pager cannot	The staff pager is not placed correctly.		
charge.	Place the staff pager correctly		
	■ The AC adaptor is disconnected.		
	Check the cable connection.		
	■ The power supply terminal is defaced.		
	Clean the power supply terminal.		

If a problem cannot be resolved even after trying the solution given above, contact your service personnel.

Caution: Do not attempt to disassemble this product as may cause damage.

Specifications ■ SPC-01 Main unit

Item		Specifications
Charging	SP-01	90~100mA
Outline	Dimension	Approx. 194 mm x 166mm x 36mm
	Weight	Approx 570 g
	Operating temperature	0°C to 40°C
Environment	Operating humidity	20% RH to 80% RH (no condensation)
Certifi	cation	F© (€

AC adaptor (accessory)

Item		Specifications
D-t-dimmt	Voltage	110V AC - 240 V AC
Rated input	Frequency	50 Hz / 60 Hz
D + 1 + +	Voltage	5V DC
Rated output	Current	2.0 A
Dimension	Dimension	Approx. 194mm x 166mm x 36mm
Dimension	DC cable	Length: Approx. 1.5 m
	Operating temperature	0°C to 40°C
Environment	Operating humidity	20% RH to 80% RH (no condensation)